

# Contents

---

<b>Preface</b> .....	xi
<b>Abbreviations</b> .....	xiii
 <b>General Information</b>	
<b>Models 48 and 412</b> .....	1-2
<b>Model 88</b> .....	1-3
<b>Hardware Description</b> .....	1-5
<b>Power Supply</b> .....	1-5
<b>Control Panel</b> .....	1-5
<b>Main Board</b> .....	1-5
<b>Ribbon and Label Feed Mechanisms</b> .....	1-7
<b>Print Mechanism</b> .....	1-9
<b>Memory Expansion</b> .....	1-10
<b>Options</b> .....	1-10
<b>User-Installable Options</b> .....	1-10
<b>Factory-Installable Options</b> .....	1-11
<b>Specifications</b> .....	1-12
<b>Interface</b> .....	1-14
<b>Parallel Interface</b> .....	1-14
<b>IEEE 1284 Cable Requirements</b> .....	1-14
<b>Serial Interface</b> .....	1-14
<b>Data Transmission</b> .....	1-15
 <b>Section 2 Setup</b>	
<b>Unit Setup</b> .....	2-1
<b>Connecting the Power Cord</b> .....	2-5
<b>Connecting the Communications Interface Cables</b> .....	2-6
<b>Label and Ribbon Requirements</b> .....	2-10
<b>IntelliBar Ribbons</b> .....	2-12
<b>Ribbon/Label Combination</b> .....	2-14
<b>Loading Labels</b> .....	2-15
<b>Models 48 and 412</b> .....	2-15

---

<b>Model 88</b> .....	2-23
<b>Installing the Thermal Ribbon</b> .....	2-26
<b>Model 48 or 412</b> .....	2-26
<b>Model 88</b> .....	2-30
<b>Print Head Removal and Installation</b> .....	2-34
<b>Print Head Removal</b> .....	2-35
<b>Model 48 and Model 412</b> .....	2-35
<b>Model 88</b> .....	2-38
<b>Print Head Installation</b> .....	2-40
<b>Model 48 and 412</b> .....	2-40
<b>Model 88</b> .....	2-41
<b>Print Head Voltage Adjustment</b> .....	2-42
<b>Section 3 Unit Operation</b>	
<b>Controls and Indicators</b> .....	3-1
<b>Self-Test</b> .....	3-4
<b>Test Page</b> .....	3-6
<b>Bar Code</b> .....	3-7
<b>Menu Tree</b> .....	3-7
<b>Default Factory Settings</b> .....	3-7
<b>Changing Settings</b> .....	3-9
<b>Controlling the Printer</b> .....	3-20
<b>LCD Display Messages</b> .....	3-26
<b>Printing Modes</b> .....	3-30
<b>Standard Mode</b> .....	3-30
<b>Peel-Off Mode</b> .....	3-30
<b>Tear-Off Mode</b> .....	3-31
<b>Cut-Off Mode</b> .....	3-31
<b>Section 4 Options</b>	
<b>Memory Expansion</b> .....	4-1
<b>IntelliTech International Inc. Options</b> .....	4-3
<b>User-Installable Options</b> .....	4-3
<b>Factory-Installable Options</b> .....	4-3
<b>Memory Expansion Module Installation (All Models)</b> .....	4-4
<b>Installing SIMMs</b> .....	4-7

---

---

<b>Label Cutter Installation Procedure Overview (Model 48 and 412)</b> .....	4-11
<b>A. Remove the Standard Peel-Off Assembly (Model 48 and 412)</b> .....	4-12
<b>B. Install the Cutter Option (Model 48 and 412)</b> .....	4-14
<b>C. Configure the Printer to Use the Cutter (Model 48 and 412)</b> .....	4-15
<b>Internal Rewinder (Model 48 and 412)</b> .....	4-16
<b>Loading Labels</b> .....	4-16
<b>Loading Labels in Standard Mode</b> .....	4-16
<b>Loading Labels in Peel-Off Mode</b> .....	4-19
<b>Section 5 Cleaning and Adjustments</b>	
<b>Cleaning</b> .....	5-1
<b>External Cleaning</b> .....	5-1
<b>Internal Cleaning</b> .....	5-1
<b>Print Head</b> .....	5-3
<b>Platen Roller</b> .....	5-3
<b>Sensors</b> .....	5-4
<b>Print Position Adjustment</b> .....	5-5
<b>Print Head Voltage Adjustment</b> .....	5-6
<b>Correcting Poor Print Quality</b> .....	5-6
<b>Print Head Adjustments</b> .....	5-7
<b>Media Mismatch</b> .....	5-7
<b>Density</b> .....	5-7
<b>Resistance Value</b> .....	5-7
<b>Print Head Latch</b> .....	5-8
<b>Print Speed</b> .....	5-8
<b>Ribbon Guide Plate</b> .....	5-8
<b>Bad Print Head</b> .....	5-8
<b>Mechanical Adjustments</b> .....	5-9
<b>Model 48 and 412</b> .....	5-10
<b>Label Width Guides (Model 48 and 412)</b> .....	5-10
<b>Horizontal Print Head Alignment (Model 48 and 412)</b> .....	5-11
<b>Print Head Pressure Knob for Label Thickness (Model 48 and 412)</b> .....	5-13
<b>Print Head Balance Lever for Label Width Adjustment (Model 48 and 412)</b> .....	5-14
<b>Print Head Position Dial for Label Thickness Adjustment (Model 48 and 412)</b> .....	5-15
<b>Ribbon Guide Plate (Model 48 and 412)</b> .....	5-18

---

<b>Sample Adjustment</b> .....	5-19
<b>Timing Belt Tension Adjustment (Model 48 and 412)</b> .....	5-20
<b>Model 88</b> .....	5-21
<b>Label Width and Pressure Adjustment (Model 88)</b> .....	5-21
<b>Label Thickness Dial (Model 88)</b> .....	5-23
<b>Ribbon Tension Plate (Model 88)</b> .....	5-24
<b>Print Density Adjustment</b> .....	5-26

## **Section 6 Troubleshooting**

<b>Troubleshooting the Problem</b> .....	6-1
<b>Using LCD Display Error Messages</b> .....	6-2
<b>Correcting Print Quality</b> .....	6-6
<b>Top-Level Problem Solving</b> .....	6-8
<b>Common Questions and Answers</b> .....	6-17
<b>Fax Form</b> .....	6-24

## **Appendix A Packing**

## **Glossary**

## **Proprietary Notice and Liability Disclaimer**

---