



Instructions to install IntelliBar Mi Series Windows printer driver

1. For the most up to date driver, download from our website (<http://www.intellitech-intl.com/store/content/93-intellibar-printer-drivers-mi-series>) the zipped IntelliBar Mi Series Windows Driver Package to the Desktop on your computer
2. Unzip the downloaded driver package and note where you located it on your computer.
3. Physically install your IntelliBar printer on your local network or USB local port. The printer should have ribbon and labels installed and be powered on.
4. If a USB connection, skip to step 5. If a network connection, the following steps will display the printer's assigned DHCP IP Address:

Note: It is recommended that a Static IP Address be used. To do this, please consult with your network administrator. For now, you can use the DHCP IP address.

- A) From the "Ready" screen, press the "Menu" button.




- B) Then press the "Advanced" button.



C) Then press the “Comm” button.



D) Then press the “Ethernet” button.

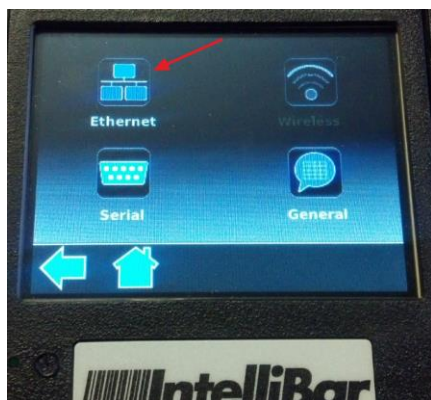

E) Write down the assigned DHCP IP Address (May be different from what is shown here). Press the “Home” icon to return to the Ready screen.



5. Go to the location where you placed the unzipped “Intellitech Mi Series Driver” package. Open the folder and Click on the “DriverWizard.exe” file to open the Installation Wizard. For help, open the “installation_Instructions.html” file.

Intellitech International Inc.
43 Broad Street
Hudson, MA 01749
(978) 212-7200

7/22/15

*** END OF DOCUMENT ***