

IntelliBar Mi Series Printers

Linux Driver Installation Instructions

NOTE: The following procedure was performed on Ubuntu Linux for an Ethernet network attached IntelliBar Mi46 printer using the IntelliBar Linux driver packaged with Ubuntu. Although this procedure is specifically for an Ubuntu Linux distribution, most other Linux distributions have similar driver installation procedures.

1. Determine the Printer IP Address

The IP address of the IntelliBar Mi printer needs to be identified in order to address the printer network location in the driver installation in step 2.3, below.

- 1.1. The printer should have the ribbon and label media loaded, be connected to the network and be powered on.
- 1.2. The printer IP address can be viewed from the front control panel display “Home” screen. Press the “Info” button and then the “Network Report” button. Make a note of the Internet IP address displayed on first line, as this will be used later.

NOTE: It is highly recommended that the IntelliBar printer be assigned “Static” IP addresses and not DHCP IP addresses.

2. Install the Printer Driver

Install the IntelliBar Linux driver as follows:

- 2.1. Open the “System Setting” Icon (gear with wrench) and then click on the “Printers” icon.
- 2.2. Click on the “Add” button in the top left corner. Select “Network Printer” and then “Find” Network Printer.
- 2.3. In the “Host” box, fill in the IP Address acquired in step 1.2. Click on “Find”.
- 2.4. Be sure “AppSocket/HP JetDirect” is highlighted in the Connections box. Click “Forward”.
- 2.5. On the Choose Driver window, be sure “select printer from database” is selected. In the “Makes” list, scroll down and highlight “IntelliTech”. Click “Forward”.
- 2.6. Be sure “IntelliTech IntelliBar Label Printer, 1.5 [en]” is highlighted. Click “Forward”.
- 2.7. Change the “Describe Printer” description to suit your installation or leave the defaults. Click “Apply”.
- 2.8. Print a Test Page to verify that the driver is installed.

*** END OF PROCEDURE***